Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.


Fuel Capacity

Fuel tank capacity, including reserve: 6.6 US gal (25 ℓ)

The tank should be refilled as soon as possible when the fuel gauge needle enters the red band.

Refueling Procedure

Refer to Safety Precautions on page 154.

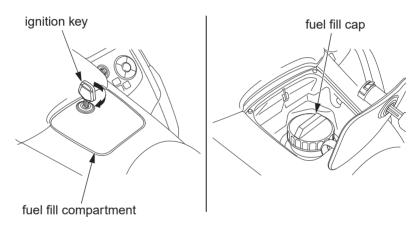

- 1. Insert the ignition key in the fuel fill compartment and turn it clockwise.
- 2. Open the fuel fill compartment.
- 3. Turn the fuel fill cap counterclockwise and remove it.

(cont'd)