

# Engine Oil & Filter

---

## *Install a New Oil Filter:*


6. Remove the oil filter with a filter wrench and let the remaining oil drain out.  
Discard the oil filter in an approved manner (page 223).
7. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 223).

### NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.

## LEFT FRONT, UNDER ENGINE

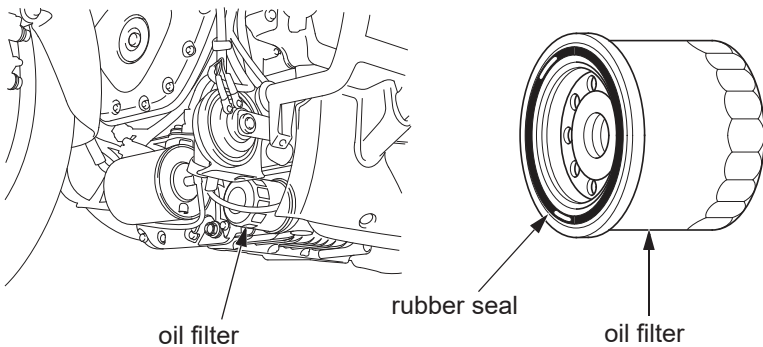

9. Install the new oil filter and tighten it by hand.
10. Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:  
19 lbf·ft (26 N·m, 2.7 kgf·m)
11. Check the condition of the sealing washer on the engine oil drain bolt.  
Replace the washer every other time the oil is changed.  
Install the engine oil drain bolt and tighten it to the specified torque:  
25 lbf·ft (34 N·m, 3.5 kgf·m)