


## Basic Operations

You can operate and set the various functions of the audio system using the interface dial and buttons on the center panel and/or switches on the left handlebar. However, you cannot operate some functions by the center panel switches/Interface dial while the motorcycle is in motion.

### Center Panel

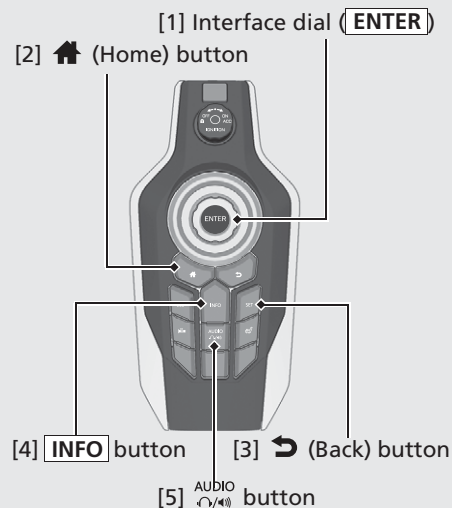

[1] (Interface dial): Rotate or move in the eight possible directions to select the available choices. Press to set your selection.

- When listening to the radio
  - Rotate or move : Switches to a higher-frequency
  - Rotate or move : Switches to a lower-frequency
  - Move and hold: Selects the next station with strong reception.
  - Move and hold: Selects the previous station with strong reception.
  - Move : Selects the next preset radio station.
  - Move : Selects the previous preset radio station.
- When listening to an iPod, USB flash drive or *Bluetooth*<sup>®</sup> audio
  - Move : Skips to the next song.
  - Move : Goes back to the beginning of the current or previous song.
- While the motorcycle is in motion
  - Rotate : Adjusts a volume of the current audio mode.

- [2] (Home) button: Select to go to the home screen.
- [3] (Back) button: Press to go return the previous screen.
- [4] **INFO** button: Press to switch the information displayed on the information bar.
- [5] <sup>AUDIO</sup> button: Press to switch the audio output between the paired *Bluetooth*<sup>®</sup> headsets and the speakers.