

Changing Clutch Oil Filter


GL1800BD/D/DA

Use a new Honda Genuine clutch oil filter or equivalent specified for your model.

NOTICE

Using the wrong clutch oil filter can result in serious damage to the transmission.

1. Follow the steps 1- 6 of Changing Engine Oil & Filter. ► P. 159
2. Place a drain pan under the clutch oil filter cover.
3. Remove the clutch oil filter cover, spring and clutch oil filter by removing the oil filter cover bolts.
 - Discard the oil and clutch oil filter at an approved recycling center.

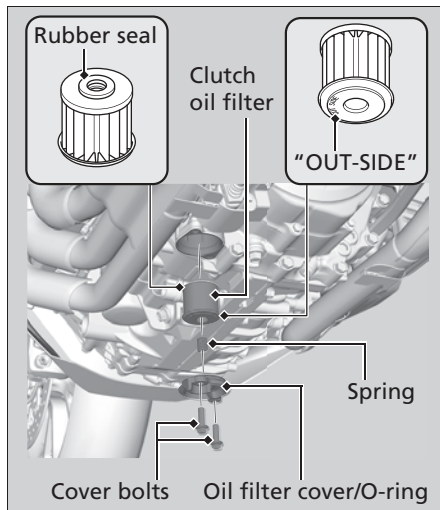

4. Install a new clutch oil filter with the rubber seal facing in, toward the engine. You will see "OUT-SIDE" mark on the clutch oil filter body, toward the filter cover.
5. Replace the O-ring and apply a thin coat of engine oil to new O-ring before installing it.
6. Install the spring and the clutch oil filter cover.

7. Install the clutch oil filter cover bolts and tighten.
8. Apply a thin coat of engine oil to the rubber seal of a new engine oil filter.
 - P. 160
9. Install the new engine oil filter and tighten.

Torque: 19 lbf-ft (26 N·m, 2.7 kgf·m)

10. Replace the sealing washers with new ones. Install the drain bolts and tighten them. ► P. 159

Torque: 22 lbf-ft (30 N·m, 3.1 kgf·m)

11. Fill the crankcase with the recommended oil (► P. 148, 237, 239) and install the oil fill cap.

Required oil:

When changing oil, engine oil filter & clutch oil filter:

4.9 US qt (4.6 liters)

12. Check the oil level. (► P. 158)
13. Check that there are no oil leaks.