

Troubleshooting

Engine Will Not Start	P. 177	Low Tire Pressure Indicator.....	P. 181	When the Honda SMART Key System Does Not Operate Properly	P. 188
Overheating (High coolant temperature indicator is on)	P. 178	TPMS Indicator	P. 182	Activating the Electrical System in an Emergency	P. 189
Warning Indicators On or Flashing	P. 179	AIRBAG Indicator GL1800DA	P. 182	If the Saddlebags or Travel Trunk Won't Open ..	P. 191
Low Oil Pressure Indicator	P. 179	Other Warning Indications	P. 183	Tire Puncture	P. 193
PGM-FI (Programmed Fuel Injection)		Fuel Gauge Failure Indication	P. 183	Audio System Trouble	P. 199
Malfunction Indicator Lamp (MIL)	P. 179	Handle Grip Heater Failure Indication ...	P. 183	Electrical Trouble	P. 207
Combined ABS Indicator	P. 179	Seat Heaters Failure Indication		Battery Goes Dead.....	P. 207
Torque Control Indicator		GL1800/D/DA	P. 184	Burned-out Light Bulb	P. 207
GL1800/D/DA	P. 180	Coolant Temperature Gauge Failure Indication .	P. 184	Blown Fuse.....	P. 209
Honda SMART Key Indicator	P. 180	If the “-” is Blinking in the Gear Position Indicator While Riding (GL1800BD/D/DA)	P. 185		
Clutch Temperature Indicator		When the Idling Stop System Does Not Operate Properly (GL1800D/DA Canada model) ..	P. 186		
GL1800BD/D/DA	P. 181				