

### Starter Operates But Engine Does Not Start

---

Check the following items:

- Check the correct engine starting sequence ➤ P. 112
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL) is on
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

### Starter Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence ➤ P. 112
- Check for a blown fuse ➤ P. 209
- Check for a loose battery connection (➤ P. 153) or battery terminal corrosion (➤ P. 146)
- Check the condition of the battery ➤ P. 207

If the problem continues, have your motorcycle inspected by your dealer.