


7. **GL1800/D/DA**

Support your motorcycle securely and raise the rear wheel off the ground using the center stand or a hoist.

GL1800B/BD

Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.

8. Remove the rear wheel nuts, and remove the rear wheel.

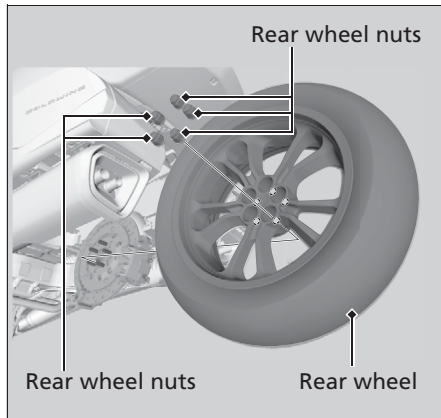

Installation

1. To install the rear wheel, reverse the removal procedure.
2. Install the rear wheel and tighten the rear wheel nuts equally in the crisscross pattern in two or three steps.

Torque: 80 lbf·ft (108 N·m, 11.0 kgf·m)

3. Install the parts in the reverse order of removal.
4. Check that the wheel rotates freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.