



Cruise control set speed & Air temperature gauge display

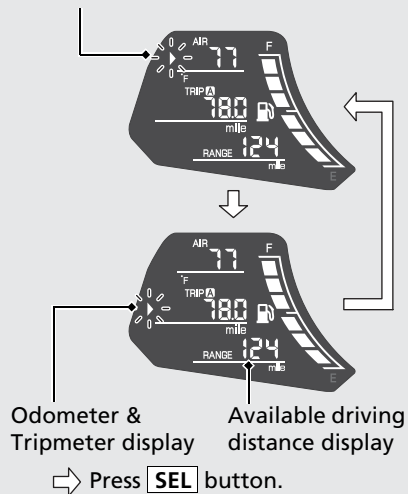

1 Cruise Control Set Speed () & Air temperature Gauge [AIR] Display

To select cruise control set speed or air temperature gauge, Press **SET** button when the cursor is at cruise control set speed and Air temperature gauge display.

Cruise control set speed ()

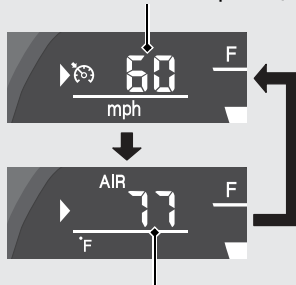

Air temperature gauge

Press **SET** button.

- 1 Press **SEL** button to move the cursor to the cruise control set speed and air temperature gauge display.
- 2 Press **SET** button to select the cruise control set speed or air temperature gauge.

Cruise Control Set Speed ()

The speed set for the cruise control is displayed.

If the cruise control set speed does not memorized, "----" is displayed.

Cruise Control: P.123

Air Temperature Gauge [AIR]

Displays ambient temperature.

Display range: 14 to 122°F (-10 to 50°C)

- Below 13°F (-11°C): "----" is displayed
- Above 122°F (50°C): 122°F or 50°C flashes

The temperature readout may be incorrect at low speeds due to reflected heat.