



## INFO 2 Display

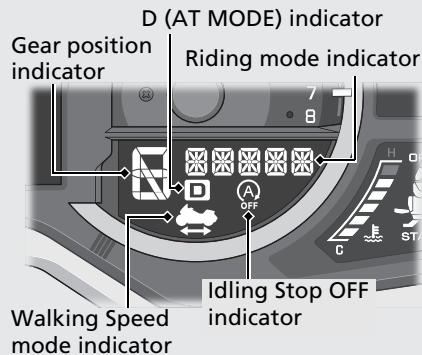

INFO 2 display contains the following:

- Gear position indicator (→ P.39)
- Riding mode indicator (→ P.40)
- GL1800BD/D/DA  
D (AT MODE) indicator ( ) (→ P.40)
- GL1800BD/D/DA Canada model only  
Idling Stop OFF indicator ( ) (→ P.40)
- GL1800BD/D/DA  
Walking Speed mode indicator ( ) (→ P.40)

## Gear Position Indicator

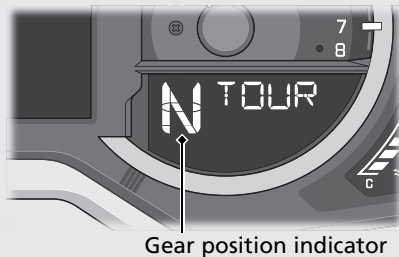

The gear position is shown in the gear position indicator as follows:

GL1800BD/D/DA

| Indication | Gear position    |
|------------|------------------|
| 1          | 1st gear         |
| 2          | 2nd gear         |
| 3          | 3rd gear         |
| 4          | 4th gear         |
| 5          | 5th gear         |
| 6          | 6th gear         |
| 7          | 7th gear         |
| N          | Neutral          |
| R          | Reverse          |
| F          | Forward          |
| !          | Shifting failure |

- ▶ " – " flashes when the engine stop switch position is changed from (Run) to (Stop) position with the ignition switch in ON.
- ▶ " – " flashes when the ignition switch is turned ON with the engine stop switch in the (Stop) position.

The indicator may flash if:

- ▶ The front wheel leaves the ground.
- ▶ You turn the wheel while the vehicle is upright on the stand.

This is normal. To operate the system again, turn the ignition switch to OFF, and then to ON again.

**If " – " is blinking in the gear position indicator while riding:** (→ P.185)