



Items	Frequency*1								Regular Replace	Refer to page	
	x 1,000 mi	0.6	4	8	12	16	20	24			
	x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-related Items	Fuel Line				I		I		I		-
	Throttle Operation				I		I		I		169
	Air Cleaner*2						R				-
	Crankcase Breather*3			C	C	C	C	C	C		170
	Spark Plug						R				157
	Valve Clearance								I		-
	Engine Oil			R		R		R		1 Year	158
	Engine Oil Filter			R				R			159
	Clutch Oil Filter (GL1800BD/D/DA)			R				R			161
	Engine Idle Speed				I		I		I		-
	Radiator Coolant*5				I		I		I	3 Years	162
	Cooling System				I		I		I		-
	Secondary Air Supply System						I				-
Evaporative Emission Control System*4						I				-	
Non-Emission-Related Items	Final Drive Oil									3 Years	163
	Brake Fluid*5			I	I	I	I	I	I	2 Years	164
	Brake Pads Wear			I	I	I	I	I	I		165
	Brake System				I		I		I		143
	Brake Light Switch				I		I		I		166
	Brake Lock Operation (GL1800BD/D/DA)			I	I	I	I	I	I		166
	Headlight Aim				I		I		I		171
	Clutch System (GL1800/B)				I		I		I		171
	Clutch Fluid*5 (GL1800/B)			I	I	I	I	I	I	2 Years	168
	Reverse Operation (GL1800/B)				I		I		I		-
	Side Stand				I		I		I		167
	Suspension				I		I		I		-
	Nuts, Bolts, Fasteners				I		I		I		-
Wheels/Tires				I		I		I		-	
Steering Head Bearings				I		I		I		-	

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual. (P. 232)

 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- R** : Replace

Notes:

- *1 : At higher odometer reading, repeat at the frequency interval established here.
- *2 : Service more frequently when riding in unusually wet or dusty areas.
- *3 : Service more frequently when riding in rain or at full throttle.
- *4 : 50 STATE (meets California)
- *5 : Replacement requires mechanical skill.