

(1) "MIN" LEVEL

### **Brake Fluid**

#### **Front Brake Master Cylinder**

Always inspect the brake fluid level.

Remove the screws, master cylinder cover and diaphragm.

If the fluid level is lower than the "MIN" line, check for the brake pad wear.

Replace the brake pad if necessary.

Refer to page 5-24 for brake pad replacement.

Also check the brake system for leaks.



(1) BRAKE HOSE


Check that the brake hose do not bind or kink in all steering position, and is not pulled when the suspension is extended.

Replace the brake fluid every 6 months.

Replace the brake hose every year.

Do not service the brake system in high humidity.

**Brake fluid: DOT 4 only**

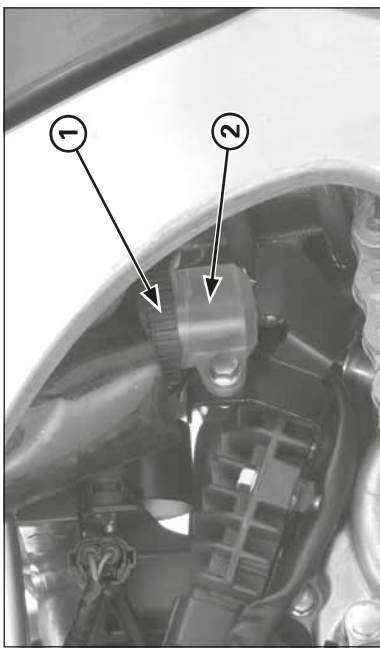

(1) COVER  
(2) "MIN" LEVEL

#### **Rear Master Cylinder**

Always inspect the brake fluid level.

Remove the master cylinder reservoir cover, set plate and diaphragm.

If the fluid level is lower than the "MIN" level, check for brake pad wear.

Replace the brake pad if necessary.

Refer to page 5-24 for brake pad replacement.

Also check the brake system for leaks.

Replace the brake fluid every 6 months.

Replace the brake hose every year.

Do not service the brake system in high humidity.

**Brake fluid: DOT 4 only**