


- (1) DRIVER
- (2) ATTACHMENT

**Tools:**


**Driver** 07749-0010000  
**Attachment, 42 x 47 mm** 07746-0010300

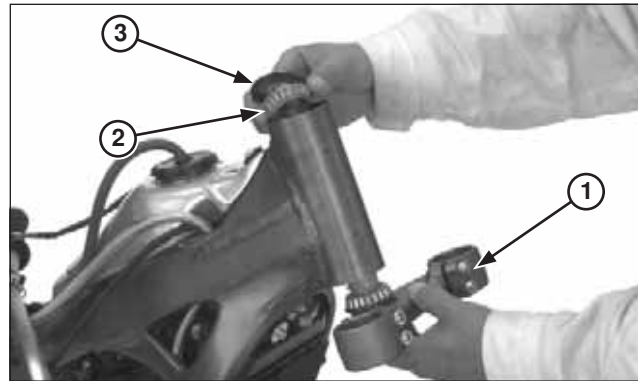

- (1) STEM
- (2) UPPER BEARING
- (3) DUST SEAL

Install new bearing races.

Pack the upper and lower bearings with grease.  
Install the steering stem, upper bearing and dust seal.

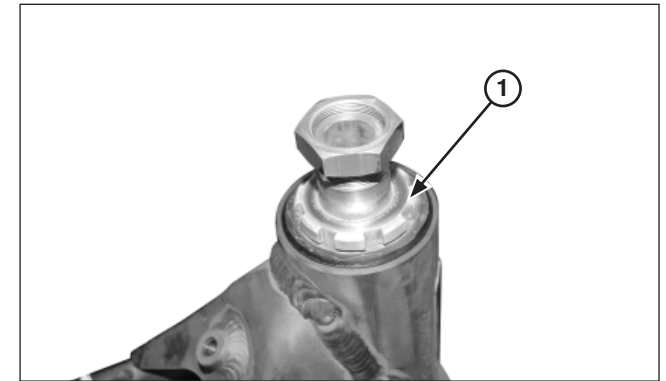

- (1) ADJUSTING NUT

Screw the stem bearing adjusting nut all the way with your fingers.