

Maintenance

Read the "Importance of maintenance" and "Basic maintenance" sections before carrying out any maintenance task.

Consult "Specifications" to obtain service data.

Importance of maintenance	P. 36	Throttle.....	P. 76
Maintenance schedule	P. 37	Crankcase breather	P. 78
Basic maintenance	P. 41	Headlight	P. 79
Component removal / installation	P. 51		
Engine oil	P. 55		
Transmission Oil	P. 60		
Coolant.....	P. 62		
Brakes	P. 64		
Side stand	P. 66		
Drive chain	P. 67		
Wheels.....	P. 72		
Clutch and brake	P. 73		