

## Seat

### Removal

- 1 Pull on the ring on the seat lock located on the right side, at the rear of the seat.
- 2 Pull the seat back until it is no longer anchored to the guide pin located on the fuel tank. Lift the seat.

### Installation

1. Align the anchor on the inner front part of the seat with the guide pin located on top of the fuel tank.
2. Pressing on the front of the seat, slide it forward while at the same time pressing on the rear over the lock.
3. Make sure that the seat is firmly locked in the correct position.

