

## Front right / left cover

### Removal

- 1 Remove the seat. 2 P. 51
- 2 Remove the bolt from the inside of the top front part (fuel tank).
- 3 Remove the bolt from the inside of the lower front part (frame support).
- 4 Remove the bolt from the top.
- 5 Remove the rear screws of the front covers inside the seat box.
- 6 Remove the front cover.

### Installation

Install the parts in the reverse order of removal.

