

5. After the oil has drained completely, install the drain bolt with a new sealing washer. Tighten the drain bolt to the specified torque.

Torque: 22 N•m (2,2 kgf•m).

6. Pour specified transmission oil.

Specified transmission oil: ELF HTX 740 (75W)

Capacity:

after draining

0.50 litre (0.53 US qt, 0.44 Imp qt)

after disassembly

0.57 litre (0.60 US qt, 0.50 Imp qt)

Check the O-ring is in good condition, install the oil filler cap.

