



The stand is located on the right side of the motorcycle. It is used to support the motorcycle when it is parked. To activate it, use your foot to lower the stand until it is fully extended.

1. Check the stand springs for damage or loss of tension.
2. Make sure that the stand assembly moves freely.

If the stand is stiff or squeaks, clean the area around the pivot and lubricate the pivot bolt with grease or oil lubricant.

### NOTICE

Do not start the motorcycle while supported on the side stand, which could be bent.