

## Drive chain slack adjustment

Adjustment of the drive chain requires the use of special tools. If you do not have the necessary means, have your dealer adjust your drive chain tension.

1. Place the motorcycle on its side stand on level ground.
2. Turn off the engine. Shift the transmission into neutral.
3. Remove the protective covers from the axle.
  - ↳ Loosen the rear axle nut just enough to move the rear wheel back.
4. Turn the eccentric chain adjuster equally on both sides until the correct drive chain tension is obtained.

