

## Checking the throttle

With the engine turned off, check that the throttle grip turns smoothly from a completely closed position to a completely open position in all steering positions and that the throttle free play is correct. If the throttle does not move smoothly, does not automatically close or if the cable is damaged, have your dealer inspect the motorcycle.

### Throttle grip free play:

2 to 4 mm

