

Locating malfunctions

Engine does not start	P. 81
Warning indicators on.....	P. 82
Flat tyres.....	P. 83
Electrical problems.....	P. 88