







Maintenance schedule

ITEM	FREQUENCY	Pre-ride check	500 Km.	1,500 Km.	3,000 Km.	4,500 Km.	6,000 Km.	Every 6 months	Yearly check	Every 2 years	Remarks	Page
Fuel level		I									Make sure that you have enough fuel for the trip planned.	32
Throttle operation		I	I	I	I	I	I		I			78
Engine oil		I	R	R	R	R	R		R			45
Engine oil filter			R	R	R	R	R		R			57
Transmission Oil			R	R	R	R	R		R			62
Drive Chain		I	I	I	I	I	I				Check the item after riding in adverse conditions and dusty areas.	69
Brake Fluid		I	I	I	I	I	I		I	R		66
Brake Pad Wear		I	I	I	I	I	I					67
Clutch system		I	I	I	I	I	I		I			75
Wheels / tyres		I	I	I	I	I	I		I			48/74
Side stand		I	I	I	I	I	I		I		Check the item after riding in adverse conditions and dusty areas.	68
Lights / horn		I	I	I	I	I	I		I			-
Engine stop switch		I	I	I	I	I	I					-
Fuel Line			I						I			-
Fuel filter									I			-
Clean under the front suspension fender								I				-
Air cleaner			C	R	R	R	R				Check the air cleaner after riding in dusty areas.	51

