

Changing the oil

1. Warm up the engine before draining the oil.
 - ▲ This will ensure complete and rapid draining.
 - ▲ Remove the bolts and crankcase skid plate.
2. Support the motorcycle in an upright position on level surface.
3. Remove the oil filler cap from the clutch cover.
4. Place an oil drain pan under the engine to catch the oil, then remove the drain bolt and sealing washer from the left crankcase.

