


Adjusting the free play of the clutch lever and the front brake lever

The clutch lever and the front brake lever free play can be adjusted by turning the adjuster.

- To reduce free play, turn the adjuster clockwise, then tighten the lock nut securely.

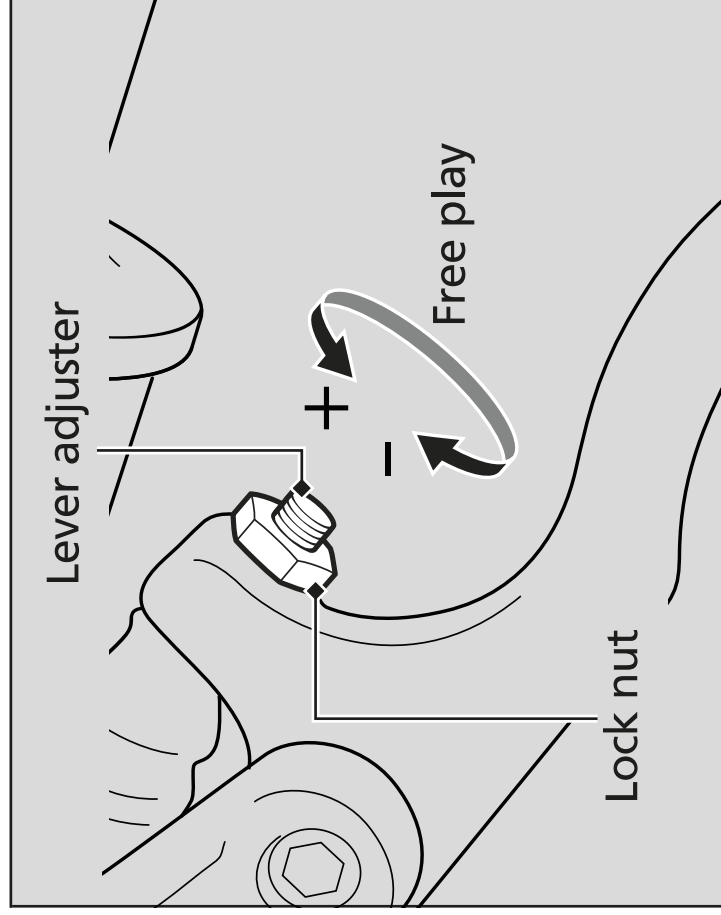

- To increase free play, turn the adjuster counterclockwise, then tighten the lock nut securely.

NOTICE

Do not adjust the free play of the lever to less than 5 mm.