

Cleaning the crankcase breather

Service more frequently when riding in rain or at full throttle. Service if the accumulated deposits can be seen in the transparent section of the breather.

1. Remove the breather tube from the crankcase.
2. Drain the reservoirs into an appropriate container.
3. Install the crankcase breather tube.

