

### Adjusting the headlight aim

The vertical aim of the front headlight can be adjusted to obtain the proper alignment. Bear in mind local laws and regulations.

1. Remove the three bolts fastening the headlight housing.
2. Adjust the alignment by moving the lower support of the headlight housing back and forth.
3. Tighten the lower bolt.
4. Tighten the two side bolts.

