

Removing the wheels

Follow these procedures if you need to remove a wheel to repair a flat.

Front wheel

Removal

1. Park on a firm, level surface.
2. Loosen the axle pinch bolt.
3. Loosen the front axle.
4. While firmly supporting the motorcycle, lift the front wheel off the ground using a safety stand or lifting device.
5. Remove the front axle and the wheel.
 - ▲ Avoid getting grease, oil or dirt on the surfaces of the discs or pads.
 - ▲ Do not press the brake lever while the front wheel is off the motorcycle.

