



# Indicators



## PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the  (Run) position.


If it comes on while engine is running:  [P.75](#)



Left turn signal indicator



Right turn signal indicator

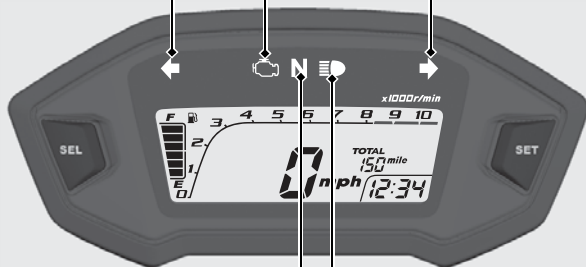

## Neutral indicator

Comes on when the transmission is in Neutral.



## High beam indicator