










Items		Frequency*1					Refer to page
		x 1,000 mi	0.6	2.5	5	7.5	
		x 1,000 km	1.0	4	8	12	
Emission-related Items	FUEL LINE 			I	I	I	-
	THROTTLE OPERATION 			I	I	I	68
	AIR CLEANER *2	Every 10,000 mi (16,000 km): R					57
	CRANKCASE BREATHER *3			C	C	C	69
	SPARK PLUG			I	R	I	70
	VALVE CLEARANCE 		I	I	I	I	-
	ENGINE OIL	Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 2,500 mi (4,000 km) or 6 months: R					54
	ENGINE OIL STRAINER SCREEN 					C	-
	ENGINE OIL CENTERIFUGAL FILTER 					C	-
	ENGINE IDLE SPEED 		I	I	I	I	-
EVAPORATIVE EMISSION CONTROL SYSTEM 					I	-	

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 104).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.