


## Cleaning the Crankcase Breather

---

1. Place a drain pan under the crankcase breather tube.
2. Remove the crankcase breather tube and drain deposits.
3. Reinstall the crankcase breather tube.

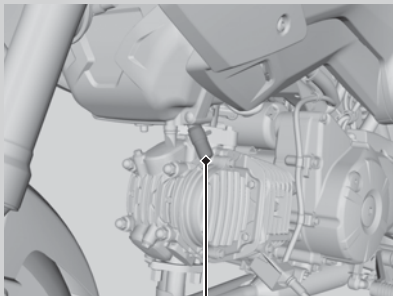

Crankcase breather tube