


# Retractable Ignition Key

Avoid contact with the key whenever it extends or retracts.

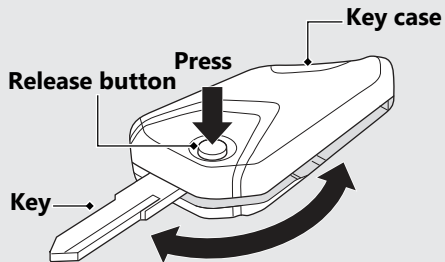

## To release the key

Press the release button to release the key out from the key case.

- ▶ Make sure to fully extend the key.

## To retract the key

Push the key inside the key case until you hear a click while pressing the release button.