


Retractable Ignition Key

Avoid contact with the key whenever it extends or retracts.

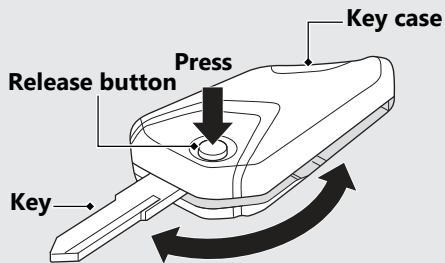

To release the key

Press the release button to release the key out from the key case.

► Make sure to fully extend the key.

To retract the key

Push the key inside the key case until you hear a click while pressing the release button.