



Driver Controls

Parking Brake Lever

The parking brake lever is located between the driver's and passenger's seats. To apply the brake, pull the lever up fully. To release it, pull up slightly, push the button at the end of the lever, then lower it.

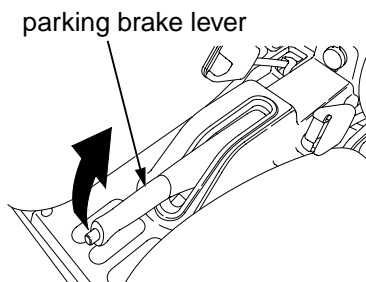

TO APPLY
THE PARKING BRAKE

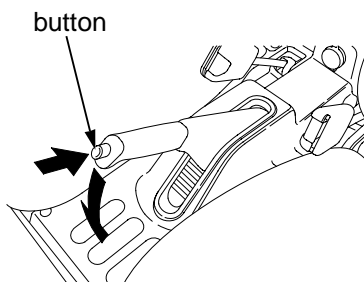

TO RELEASE
THE PARKING BRAKE

NOTICE

Driving with the parking brake on can damage the rear brakes and drivetrain.