

# Engine Oil & Filter

## *Install a New Engine Oil Filter:*

7. Remove the right seat (page 91).
8. Remove the center panel by removing the screws A and screws B.
9. Remove the right seat mount pipe by removing the bolt A, bolts B, collar A and collars B.
10. Remove the under panel by removing the screws C.

