

Engine Oil & Filter

Add Engine Oil:

21. Check that the drain plug O-ring is in good condition. If necessary, replace it.
22. Apply a thin coat of engine oil to the drain plug O-ring.
23. Reinstall the drain plug with a new sealing washer, and tighten it to the specified torque:
18 lbf-ft (25 N·m , 2.5 kgf-m)
24. Reinstall the maintenance lid by tightening the bolts to the specified torque:
9 lbf-ft (12 N·m , 1.2 kgf-m)
25. Lower your Honda MUV safely.
26. Fill the crankcase with the recommended oil, approximately:
3.1 US qt (2.9 ℓ)
27. Reinstall the oil filler cap and dipstick.
28. Reinstall the left seat and rubber dust cover.
29. Start the engine and let it idle for 3—5 minutes.
30. Remove the left seat and rubber dust cover.
31. Stop the engine and after 2—3 minutes, check the oil level. Make sure the oil is between the upper and lower level marks on the dipstick. If necessary, add more oil but do not overfill.
32. Reinstall the oil filler cap, dipstick and rubber dust cover.
33. Reinstall the left seat.
34. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

UNDER BODY

drain plug sealing washer
drain plug O-ring

