


If a Fuse Blows

Main Fuse Access


1. To prevent an accidental short circuit, turn the ignition switch OFF (○) before checking or replacing the fuses.
2. Open the front hood (page 90).
3. Remove the battery box cover (page 154).
4. To access the main fuse, open the fuse box cover.
5. Pull the main fuse out. If it is blown, install the spare main fuse.

UNDER FRONT HOOD

fuse box cover

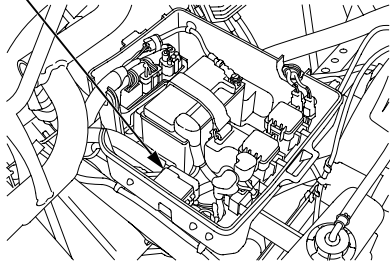

spare main fuse

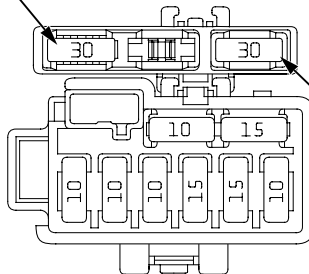

main fuse

(cont'd)