

# Indicators & Displays



## PGM-FI Malfunction Indicator Lamp (MIL)

This indicator comes on and stays on when there is a problem with your vehicle's engine system. If this happens, reduce speed and take your vehicle to a dealer as soon as possible. The light should also come on for a few seconds when the ignition switch is turned to the ON ( I ) position.



## Low Fuel Indicator

This indicator comes on and stays on when the remaining fuel is low. When the indicator comes on, the amount of fuel in the tank is approximately 1.5 US gal (5.7 ℓ ). The light should also come on for a few seconds when the ignition switch is turned to the ON ( I ) position.

(U, CM type only)

Multi-function display	This display includes the following functions.
Gear position indicator	This indicator shows the gear position (page 21).
Oil change indicator	This indicator comes on when specified maintenance interval for engine oil change is reached (page 22).
Speedometer	This meter shows driving speed.
Odometer	This meter shows accumulated mileage (page 23).
Tripmeter	This meter shows mileage per trip (page 23).
Hourmeter	This meter shows hours and tenths of hours of engine operation (page 24).
Hourmeter/odometer/tripmeter select button	This button used to selects display of the odometer or tripmeter or hourmeter, to resets the tripmeter to zero (0) (page 23) and to resets the oil change indicator (page 22).