

# Is Your Vehicle Ready to Drive?

---

## Pre-drive Inspection

Check the following items before driving your Honda MUV:

- Oil Level*      Check the engine oil level and add oil, if needed (page 101). Also check under the vehicle for leaks.
- Coolant*        Check the coolant level (page 114). If it is low, add a 50/50 mixture of silicate-free coolant and distilled water. Check for leaks.
- Fuel Level*      Check the fuel gauge (page 14) and add fuel, if needed (page 96). Make sure the fuel fill cap is secure. Also check for the smell of fuel or fumes - if you smell any fuel, turn the ignition switch to OFF (○) immediately, and see your dealer.
- Brake Fluid*    Check the level (page 139). If it is near MIN, check the brake pads for wear (page 138). If the brake pads are within the specification, check for leaks in the braking system (page 138).
- Tires*            Check the air pressure of all tires and inflate them to the proper pressure (page 147). Also inspect the tires for damage or excessive wear (page 149). If necessary see your dealer.
- Wheels*          Make sure the wheel nuts are properly tightened and the wheels are not cracked or deformed (page 154).