

# If Your Engine Quits or Won't Start

---

| <b>SYMPTOM: Starter motor doesn't operate.</b> |  |
|--|--|
| <b>POSSIBLE CAUSE</b>                          | <b>WHAT TO DO</b>  |
| transmission not in neutral                    | Shift into neutral or press on the brake pedal.  |
| blown fuse                                     | Replace with a new fuse of the same rating (page 188).                                 |
| battery lead loose                             | Tighten the battery leads.   |
| low battery                                    | Charge the battery (page 160). If charging doesn't help, see your dealer.              |
| faulty starter motor                           | If all possible causes are negative, the starter motor may be faulty. See your dealer. |

| <b>SYMPTOM: Starter motor works, but the engine won't start.</b> |  |
|--|--|
| <b>POSSIBLE CAUSE</b>  | <b>WHAT TO DO</b>  |
| out of fuel  | Fill the fuel tank.  |
| flooded engine   | See starting the engine step 5 (page 63).  |
| loose or unconnected spark plug cap                              | Install the spark plug cap securely. If the engine still won't start, see your dealer. |
| loose battery cables   | Tighten the battery terminal bolts.  |
| weak battery   | Charge the battery (page 160). If charging doesn't help, see your dealer.              |