


# If a Fuse Blows

---

All of the electrical circuits on your Honda MUV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your Honda MUV stops working, the first thing you should check for is a blown fuse.

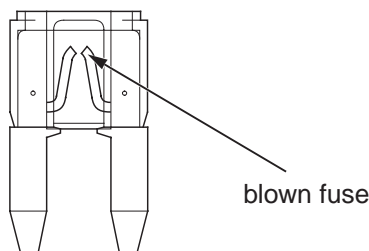

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

The main fuse and the circuit fuses are located in the battery compartment.

## Recommended Fuses

main fuse	30 A
circuit fuses	15 A×2 , 10 A×4