

# If a Fuse Blows


---

## *Main Fuse Access*


1. To prevent an accidental short circuit, turn the ignition switch OFF (○) before checking or replacing the fuses.
2. Open the front hood (page 92).
3. Remove the battery box cover (page 158).
4. To access the main fuse, open the fuse box cover.
5. Pull the main fuse out. If it is blown, install the spare main fuse.

## **UNDER FRONT HOOD**

fuse box cover

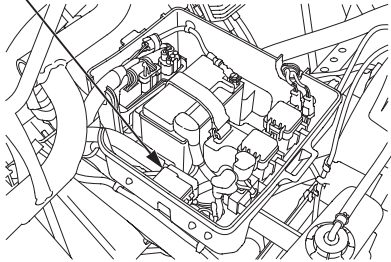

spare main fuse

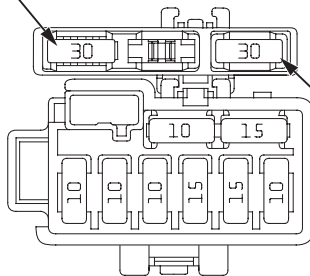

(cont'd)