

# Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).										
		Initial maintenance	Regular maintenance interval						Note	Refer to page
FREQUENCY (Whichever comes first)	× 100 mi	1	6	12	18	24	30	36		
	× 100 km	1.5	10	20	30	40	50	60		
	Hours	20	100	200	300	400	500	600		
ITEMS	Month	1	12							
Check engine oil and coolant		Check oil and coolant at fuel stop							101,114	
Check tires		Check inflation and condition once a month							147	
Check side net and snap hooks		●	●	●	●	●	●		32	
Check brake fluid		Check fluid level once a month							139	
Replace engine oil and oil filter		●	●	●	●	●	●		103	
* Inspect valve clearance		●	Every 600 miles (1,000 km) or 100 operating hours, otherwise adjust only if noisy							—
* Clean spark arrester										133
Clean air cleaner elements		Every 600 miles (1,000 km) or 100 operating hours, whichever comes first						1	119	
Check air cleaner housing drain tube								2	122	
Check spark plug									130	
* Inspect idle speed		●								—
* Check fuel lines and connections			●		●		●		—	
Check front and rear brakes		●		●			●	3	138	
Check front and rear differential oil		●		●			●		109,111	

- \* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 214).

Note 1 Service more frequently when operating in dusty areas, sand or snow.

Note 2 Service more frequently when operated in muddy, very wet conditions, or freezing temperatures.

Note 3 Service more frequently when operated in muddy conditions.