

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).										
		Initial maintenance	Regular maintenance interval							
FREQUENCY (Whichever comes first)	× 100 mi	1	6	12	18	24	30	36	Note	Refer to page
	× 100 km	1.5	10	20	30	40	50	60		
ITEMS	Hours	20	100	200	300	400	500	600		
	Month	1	12							
	Lubricate all hinges, latches, and pivots				●			●		123
**	Inspect the following items:									—
	Suspension components									—
	Wheels									154
	Driveshaft boots				●			●		155
	Accelerator and brake pedals									128,143
	Brake light switch									145
	Exhaust system									135
	Battery terminal condition									159
*	Rotate tires		Recommend 1,800 miles (3,000 km) Depending on tire wear condition							153
	Check parking brake adjustment	●						●		—
**	Inspect the following items:									—
	Tie-rod ends									—
*	Steering gearbox and boots							●		—
*	Brake hoses and lines									—
*	MUV underbody								4	—
	Replace the following items:		Every 2 years (regardless of mileage)							—
	Front and rear differential oil									109-112
*	Engine coolant									116
*	Brake fluid									—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 214).

** In the interest of safety, we recommend these items be serviced only by your dealer.

Note 4 Check the underbody whenever the under guard has been hit.