Engine Oil & Filter

- 17. Place the right under panel in the proper position.
- 18. Install the center panel while pulling forward the middle of the center fender.
- 19. Install the screws A, screws B and screws C.
- 20. Install the right seat mount pipe, collar A, collars B and tighten the bolt A and bolts B to the specified torque:

bolt A 16 lbf-ft (22 N·m, 2.2 kgf·m) bolts B 20 lbf-ft (27 N·m, 2.8 kgf·m)

- 21. Install the seat and seat-back.
- 22. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 174).

NOTICE

Improper disposal of drained fluids is harmful to the environment.