

If the Transmission Is Not Functioning Properly

Although the PGM-FI malfunction indicator lamp (MIL) is not blinking , the vehicle does not move:

If your Honda MUV won't move, it is possible the transmission is locked. Use the following procedure to unlock the transmission.

1. Shift the shift lever to the neutral (N) position.
2. Apply the parking brake.
3. Turn the ignition switch to the OFF (O) position.
4. Loosen the screw and release the lock plate.
5. Turn the emergency valve all the way in. With the engine running, your Honda MUV will move forward slowly at idle. Tighten the screw and the lock plate.
6. See your dealer as soon as possible.

LEFT SIDE OF FRONT CRANKCASE

