

Fuel Gauge

The fuel gauge is located on top of the fuel tank next to the fuel fill cap. The gauge indicates approximately how much fuel remains in the tank.

The fuel tank capacity is:

7.93 US gal (30.0 ℓ)

RIGHT SIDE

