

Jack Up Point & Support Point

Refer to *Safety Precautions* on [page 79](#).

When jacking up and supporting this vehicle, the following jack-up points and support points should be used.

⚠ WARNING

The vehicle can easily roll off the jack, seriously injuring anyone underneath.

Follow the directions for changing a tire exactly, and never get under the vehicle when it is supported only by the jack.

When using the jack, always abide by the following instructions.

- Do not leave the engine running.
- Set the drive mode in 4WD all-wheel lock and set the parking brake securely.
- Use only on a firm level surface.
- Place the jack only at the specified jack-up point.
- Do not leave any person or cargo in the vehicle.
- Do not place any object above or under the jack.

