


Lubrication

Lubricate the drive mode lever pivot and shift lever pivot as shown in the following illustration.

Open the front hood (page 92).

UNDER FRONT HOOD

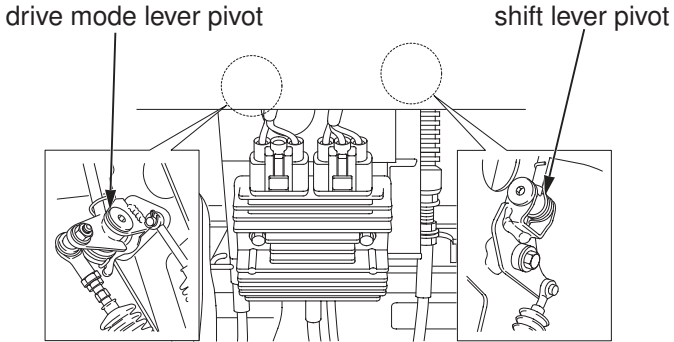

Lubricate the door latch as shown in following illustration.

Open the door (page 30).

