

Tires

Always check air pressure when your tires are “cold.” If you check air pressure when your tires are “warm”—even if your Honda MUV has only been driven for a few miles—the readings will be higher. If you let air out of warm tires to match the recommended cold tire pressures, the tires will be underinflated. Be sure to check tire pressure at the driving site, since changes in altitude can affect air pressure.

The recommended “cold” tire pressures are:

FRONT	REAR
10 psi (70 kPa)	18 psi (120 kPa)