


## 2 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press the **SEL** button. The brightness is switched.

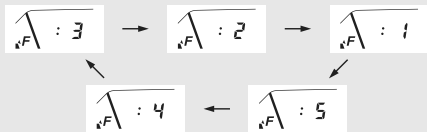

- 2 Press the **SET** button. The backlight is set, and then the display moves to the clock setting.

## 3 Clock setting:

- 1 Press the **SEL** button until the desired hour is displayed.
  - ▶ Press and hold **SEL** button to advance the hour fast.



- 2 Press the **SET** button. The minute digits start flashing.



- 3 Press the **SEL** button until the desired minute is displayed.
  - ▶ Press and hold **SEL** button to advance the minute fast.



- 4 Press the **SET** button. The clock is set, and then the display moves to the changing of speed and mileage unit.