


Instruments (Continued)

4 Changing of speed and mileage unit:

 
- 1 Press the **SEL** button to select either "mph" and "mile" or "km/h" and "km."

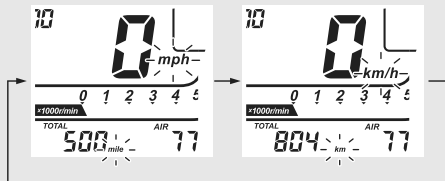

- 2 Press the **SET** button. The speed and mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.

5 Changing of fuel mileage meter unit:

- 1 Press the **SEL** button to select "mile/L" or "mile/gal."



If the "km/h" for speed and "km" for mileage are selected, the fuel mileage shown by "L/100 km" or "km/L."



- 2 Press the **SET** button. The fuel mileage meter unit is set, and then the display moves to the changing of temperature gauge unit.